
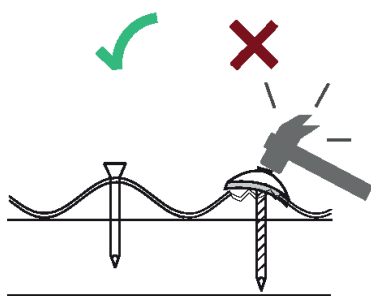


Corrugated Iron Roofing


Advice for workers on safer construction

- Use more nails at the **ridge** and **eaves**
- Battens no more than **2 ft** apart, bottom batten no more than **1 ft** apart

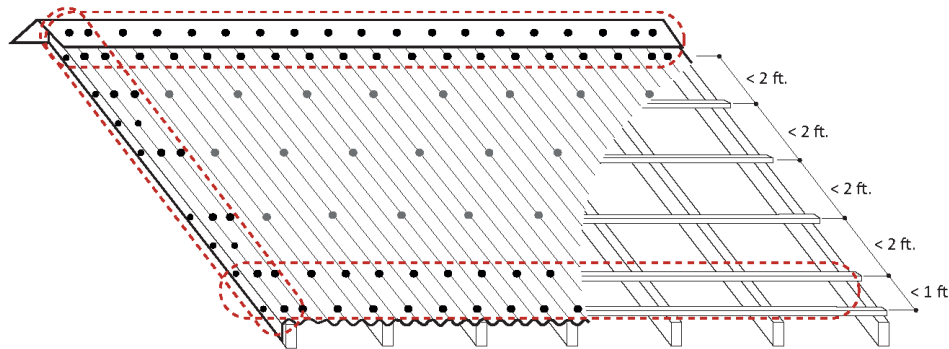

Regular
nail


Do not
flatten the
sheet

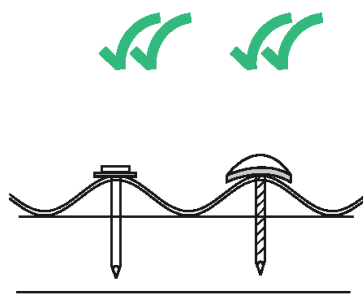

Flat-head
nail & metal
washer

Umbrella nail
(with rubber
washer)

Overlap between iron sheets

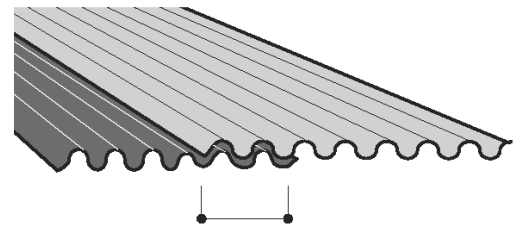

Minimum two (2) corrugations

Always wear:


Safety rules



Protection gloves
for handling



Safety boots when moving
large amounts

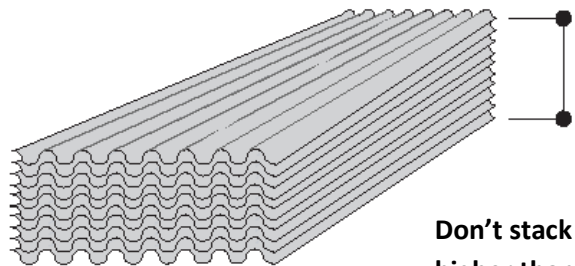

Don't stack in piles
higher than 4ft