



Handling Corrugated Iron

Advice for workers

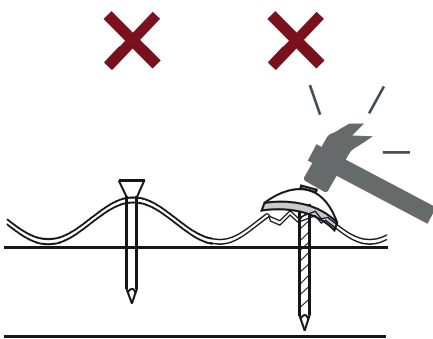


- ➔ Use more nails at the **ridge and eaves**
- ➔ Battens are **no more than 2 ft.** apart, for **bottom batten no more than 1 ft.** apart

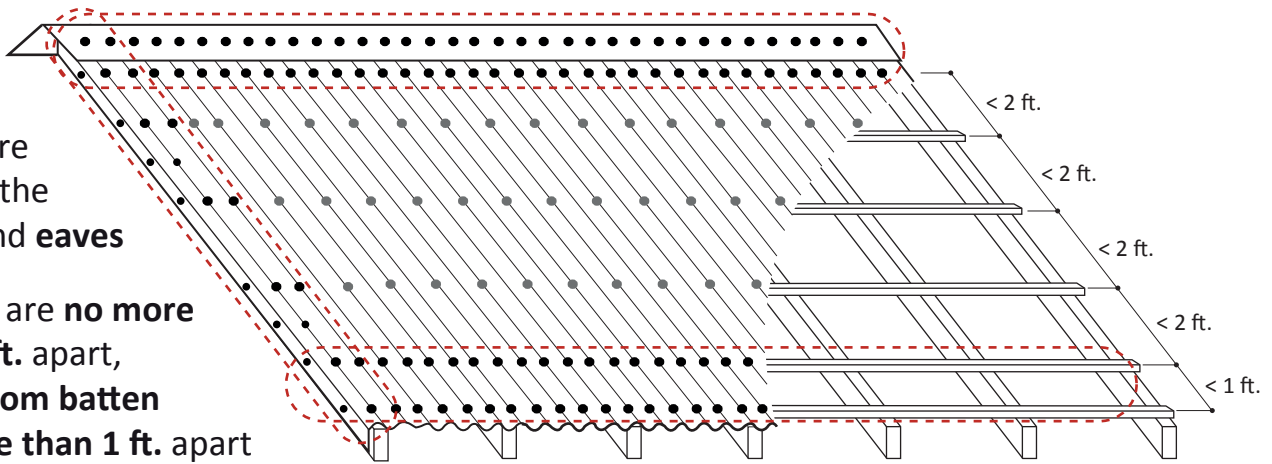


Regular nail

Do not flatter when nailing

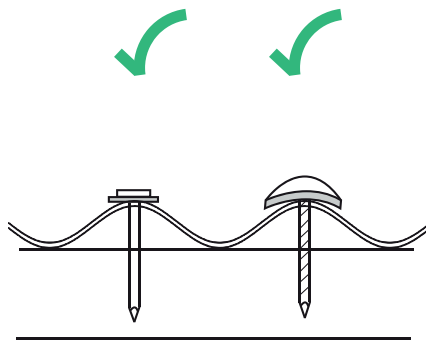

Flat head nail & metal washer


Umbrella nail & rubber washer

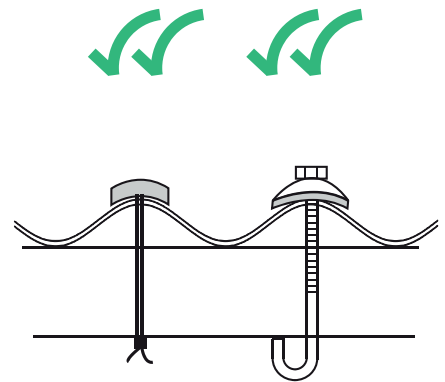

German wire

Hook bolt and washer

Overlap between sheets

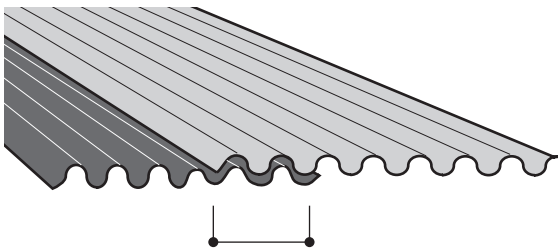


Have a minimum overlap of 2 corrugations between sheets

Safety - be carefure, it is sharp !!



Always wear **gloves** for handling

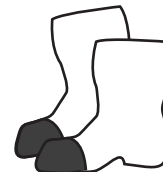

Wear **safety boots** when moving large amounts

Don't stack in piles higher than **4 ft**

